

NON-NORMAL INDICATIONS AND OPERATION

Caution lights

APU	Indicates APU fault, APU fire or compartment overheat.
Applicable ECL	APU FIRE or APU failure.
Remarks	Also illuminates during overspeed and fire test, and after start sequence when APU generator becomes available.