
# ENGINE FAILURE IN CRUISE (WITH DAMAGE)

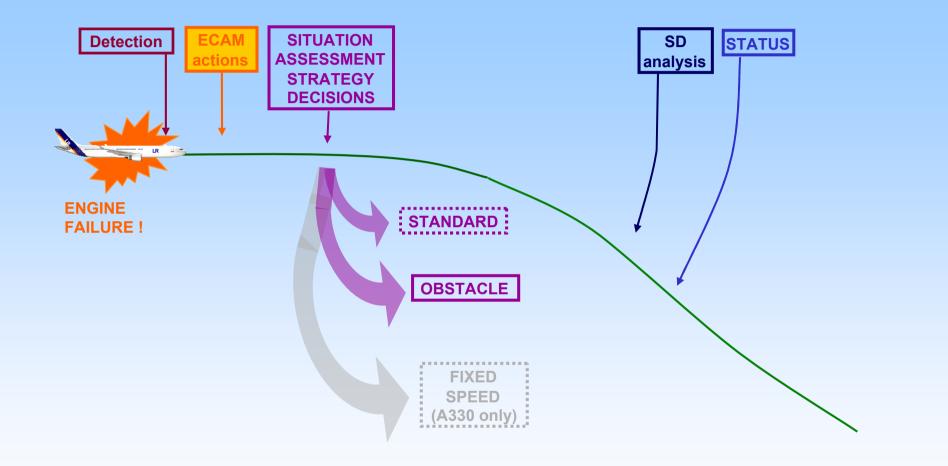


LR - Version 02a







### 1. <u>ENG 1</u> FAIL

# **DETECTION**

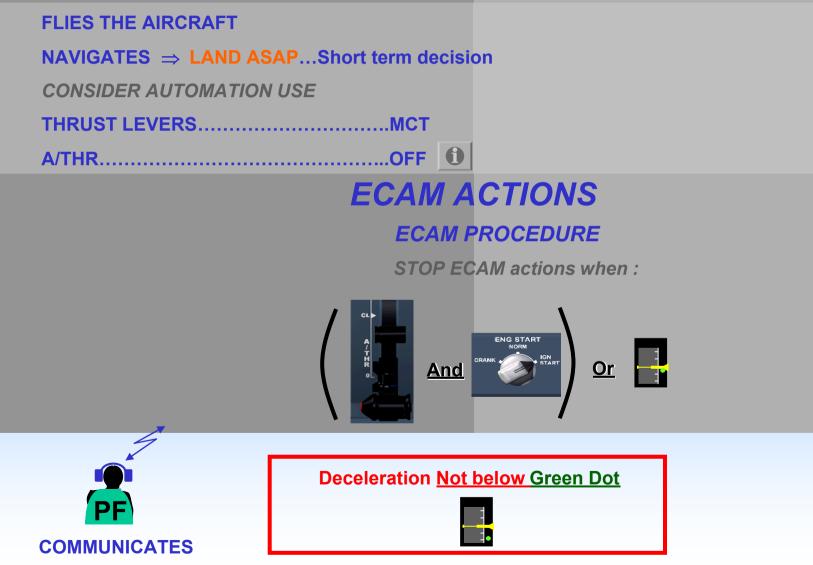

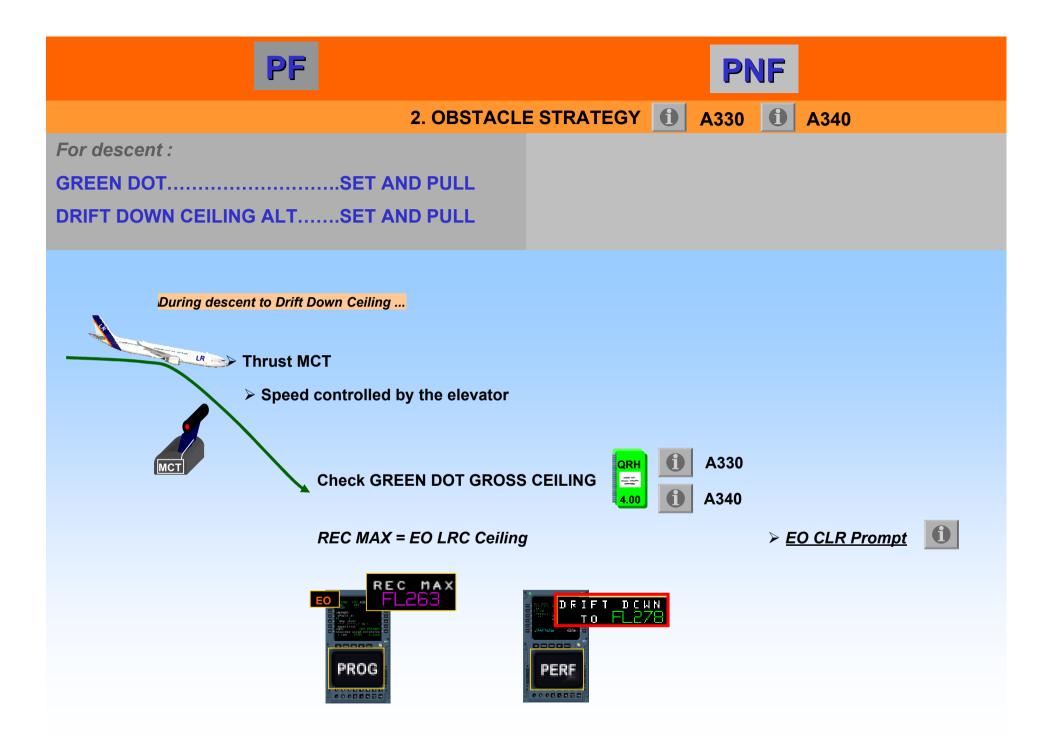

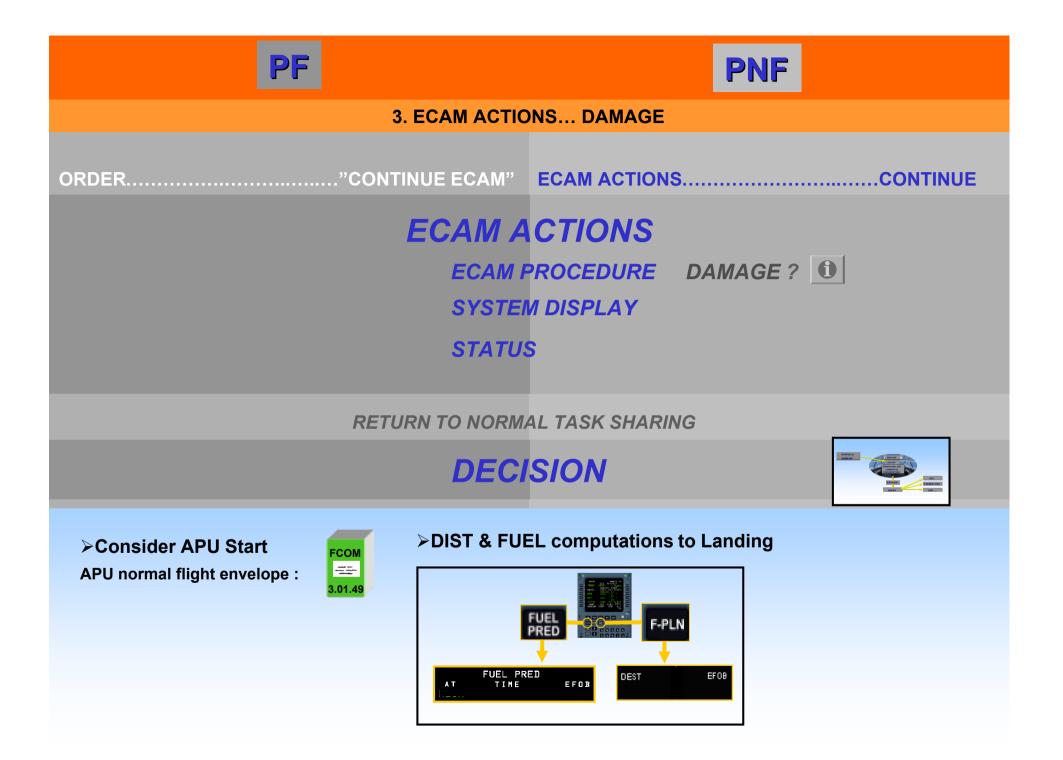






#### 4. OBSTACLE STRATEGY


When obstacles are cleared :

| LR CEILING | SET AND PULL |
|------------|--------------|
| LR SPEED   | SET          |


Reaching LR Ceiling A/THR.....ON


Descent to landing
RESUME MANAGED MODES

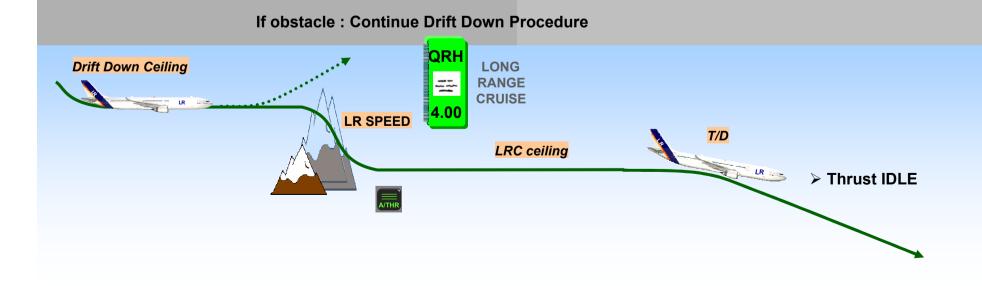


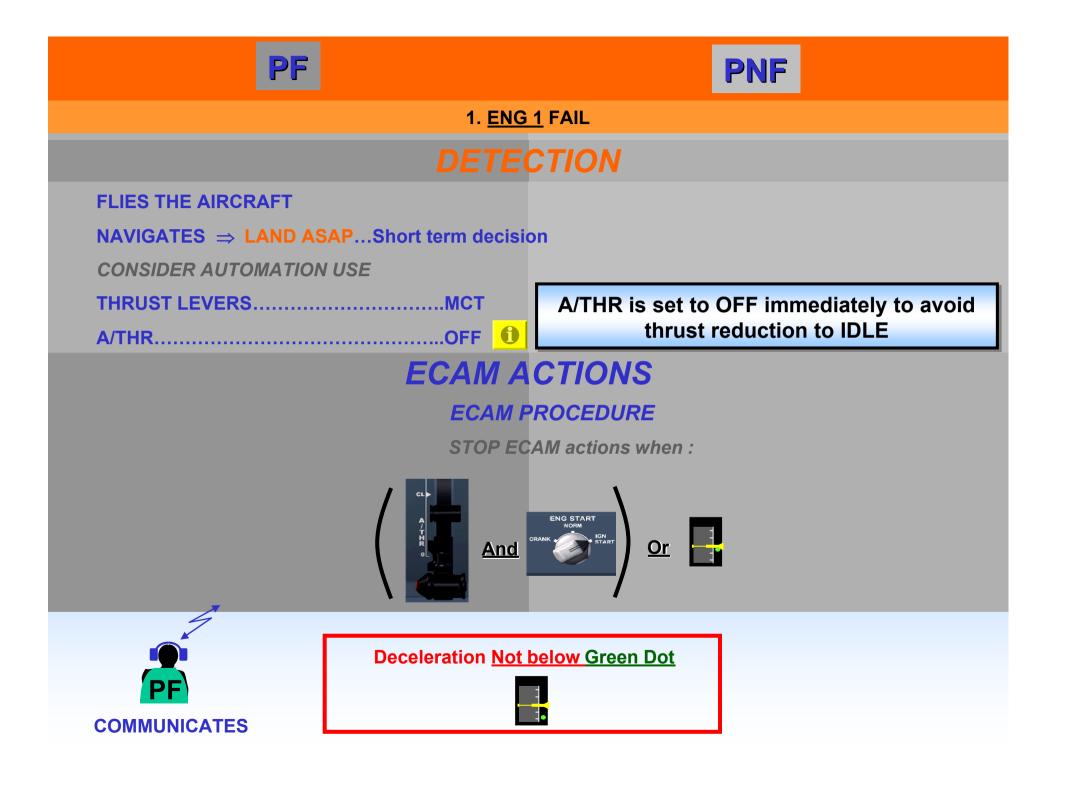




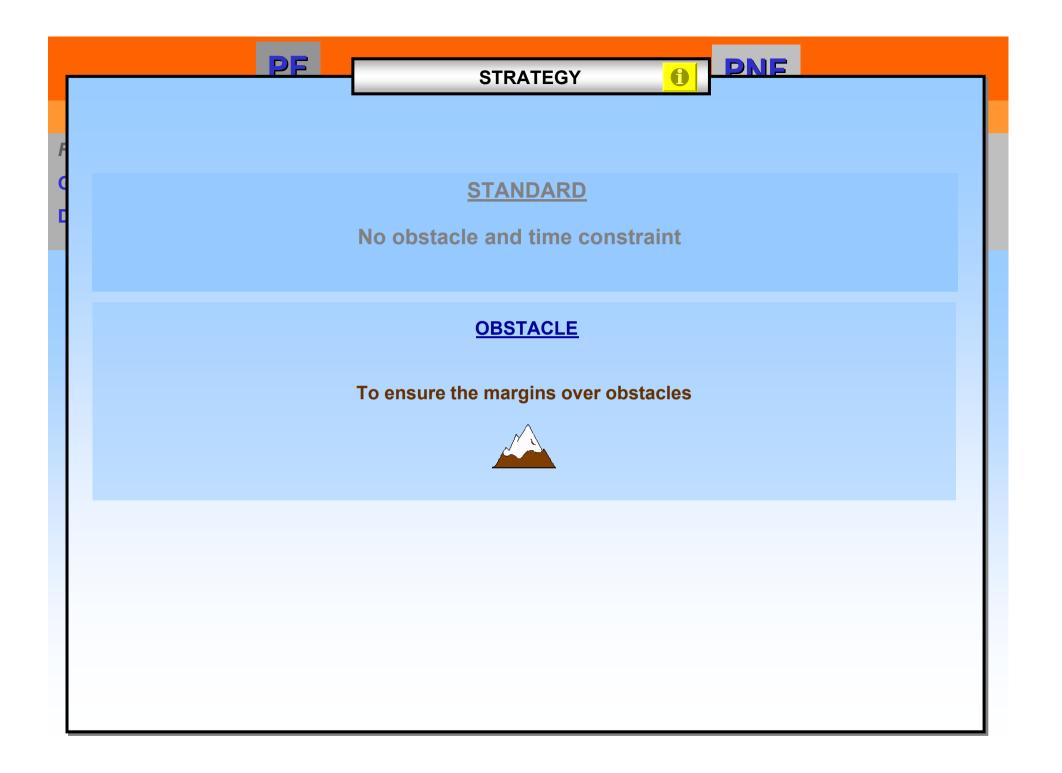

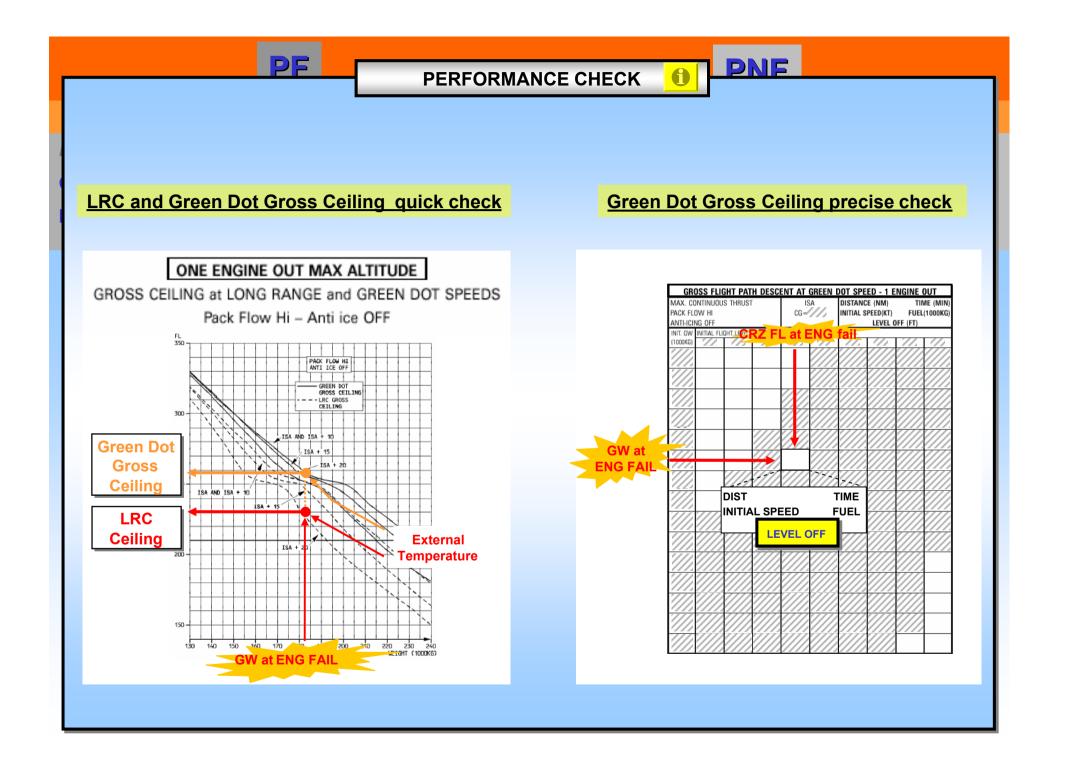

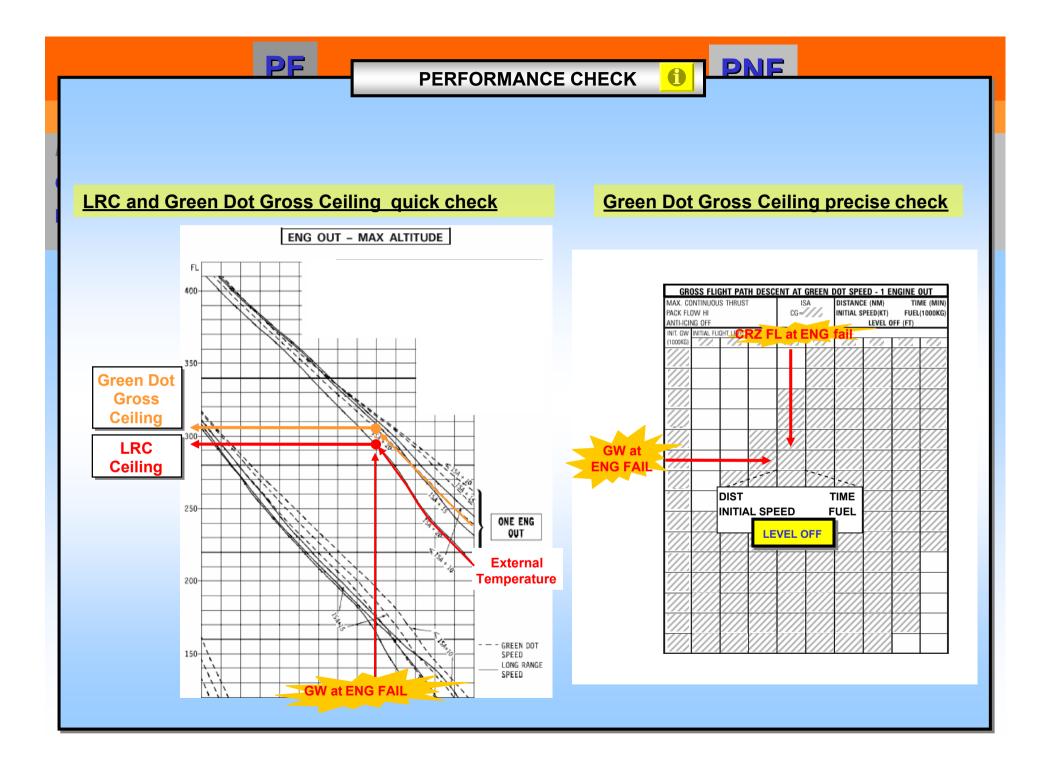

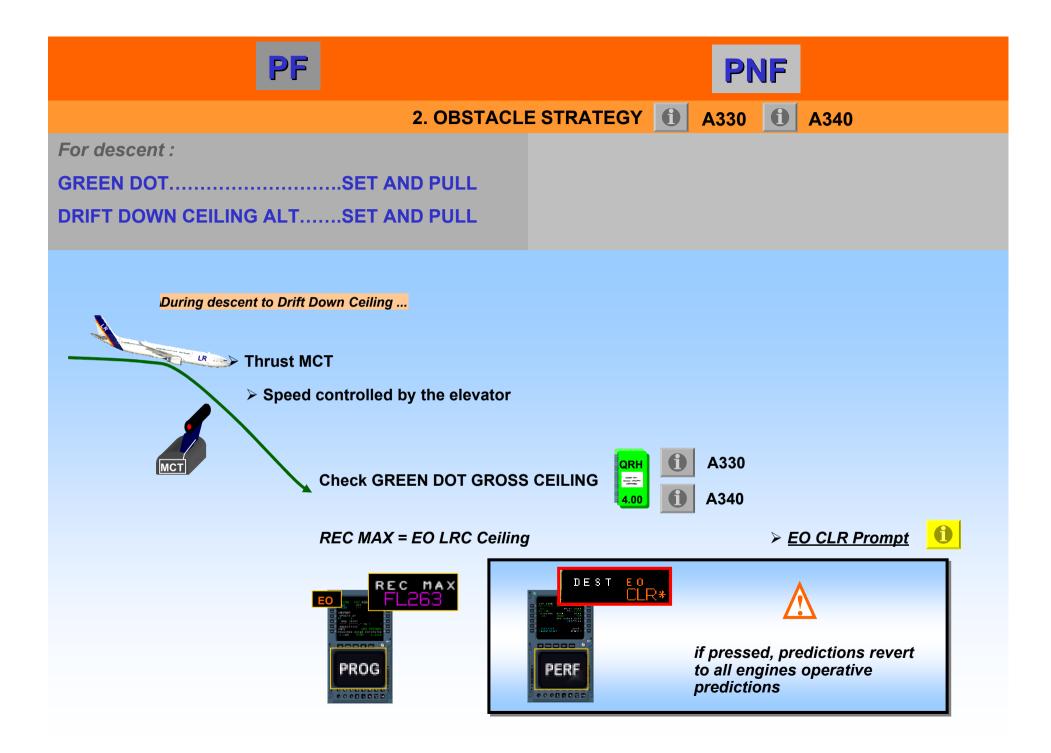

6

#### **CONSIDER ENGINE DAMAGE IF YOU NOTICE :**

- > High vibration prior to engine stopped, loud noise
- Stall
- > Any Abnormal Indication on ENG Page (such as N1 or N2 ~ 0)

## ⇒No attempt of RELIGHT