

GO - AROUND - SINGLE ENGINE

- PF:**
 - "Go-Around"
 - Press TOGA switch
 - Thrust levers to TOGA detent

- Configuration prior to go-around:**
 - Single Engine
 - FLAPS 20

