

 A340 SIMULATOR FLIGHT CREW OPERATING MANUAL	EQUIPMENT		1.25.00	P 1
	CONTENTS		SEQ 001	REV 19

	25.00	CONTENTS	
	25.10	FLIGHT DECK	
		– GENERAL	1
		– COCKPIT PLAN	3
		– SEATS	6
		– COCKPIT WINDOW	10
		– PILOT’S INSTRUMENT PANELS	11
		– PEDESTAL	13
		– OVERHEAD PANEL	14
		– FOOT WARMER ◀	15
	25.11	COCKPIT DOOR SECURITY SYSTEM ◀	
		– DOOR DESCRIPTION	1
R		– COCKPIT DOOR LOCKING SYSTEM	2
R		– CONTROLS	3
	25.12	FLIGHT CREW REST COMPARTMENT ◀	
	25.14	BULK CREW REST COMPARTMENT ◀	
	25.15	LOWER DECK	
		– LOWER DECK MOBILE CREW REST COMPARTMENT ◀	1
	25.16	IN SEAT POWER SUPPLY SYSTEM (ISPSS) ◀	
		– GENERAL	1
		– CONTROLS	1
	25.20	ELECTRICAL SUPPLY	
		– BUS EQUIPMENT LIST	1

GENERAL

The aircraft and system controls, required for piloting the aircraft, are arranged in such a way that the crew faces forward and all crewmembers can monitor instruments and systems. The designers concentrated system controls on the overhead panel by making extensive use of pushbuttons, directly installed in the system synoptic.

***Note :** The electrical circuit breaker panel is in the avionics bay to increase available space in the cockpit without any penalty in the passenger cabin.*

PRINCIPLES FOR PUSHBUTTONS WITH INTEGRATED INDICATIONS

Whenever possible, pushbuttons used for corrective actions, have integrated status and failure indications.

The pushbutton positions, and their illuminated indications, follow the "lights out" principle.

— While corresponding to particular aircraft configurations, indications also have the following color codes :

· Warnings

RED : A failure requiring immediate action.

· Cautions

AMBER : A failure, of which the flight crew should be aware, but does not call for immediate action.

· Indications

GREEN : For normal system operation.

BLUE : For normal operation of a system used temporarily.

WHITE : — For an abnormal pushbutton position.

— For a test result or maintenance information.

When the aircraft is in normal configuration, only green lights can be permanently lit, whereas blue lights can be lit intermittently.

— Pushbutton positions :


POSITION	BASIC FUNCTION
Pressed In	ON, AUTO, OVRD
Released Out	OFF, MAN

***Note :** 1. Certain pushbutton lights have two dots, indicating that the corresponding part of the pushbutton is not used.*

R *2. Certain pushbuttons do not remain pressed in. These are referred to as*
R *"Momentary Action" pushbuttons.*

GENERAL ARRANGEMENT


R

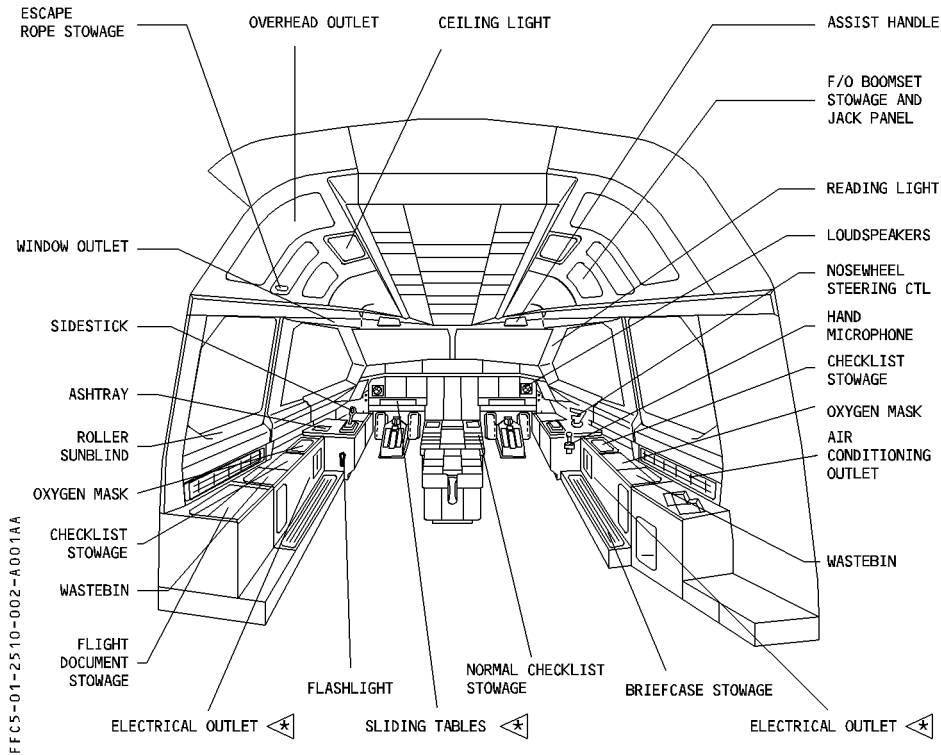

AIRBUS TRAINING  A340 SIMULATOR FLIGHT CREW OPERATING MANUAL	EQUIPMENT		1.25.10	P 3
	FLIGHT DECK		SEQ 001	REV 08


COCKPIT PLAN

- The cockpit can accommodate two crew members plus two other occupants.
- R The two pilot seats are mounted on columns.
- R The third occupant seat is also mounted on column and can rotate.
- R The fourth occupant seat is a folding seat.

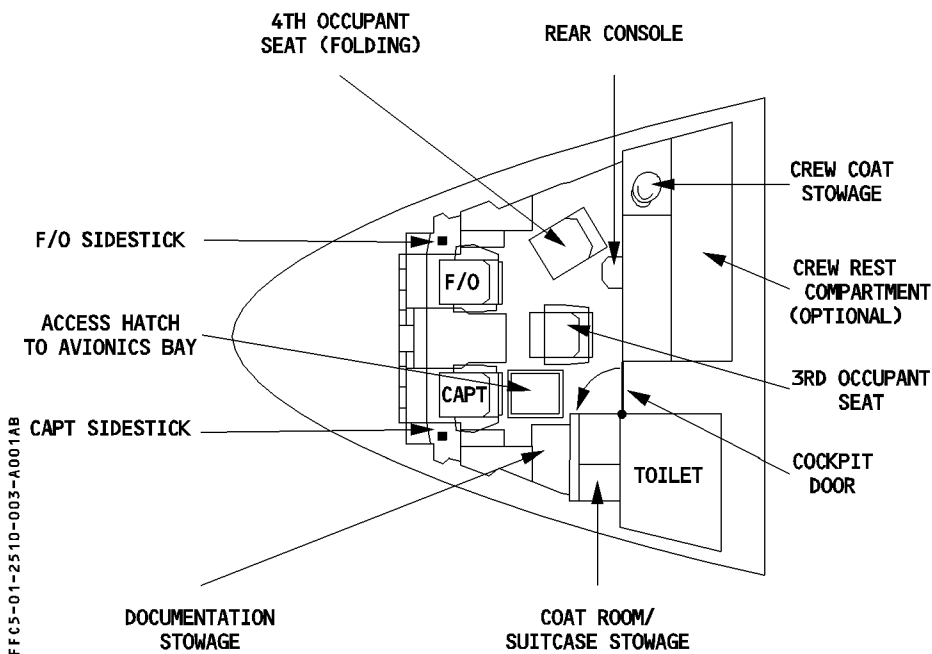


RIGHT REAR CORNER

R

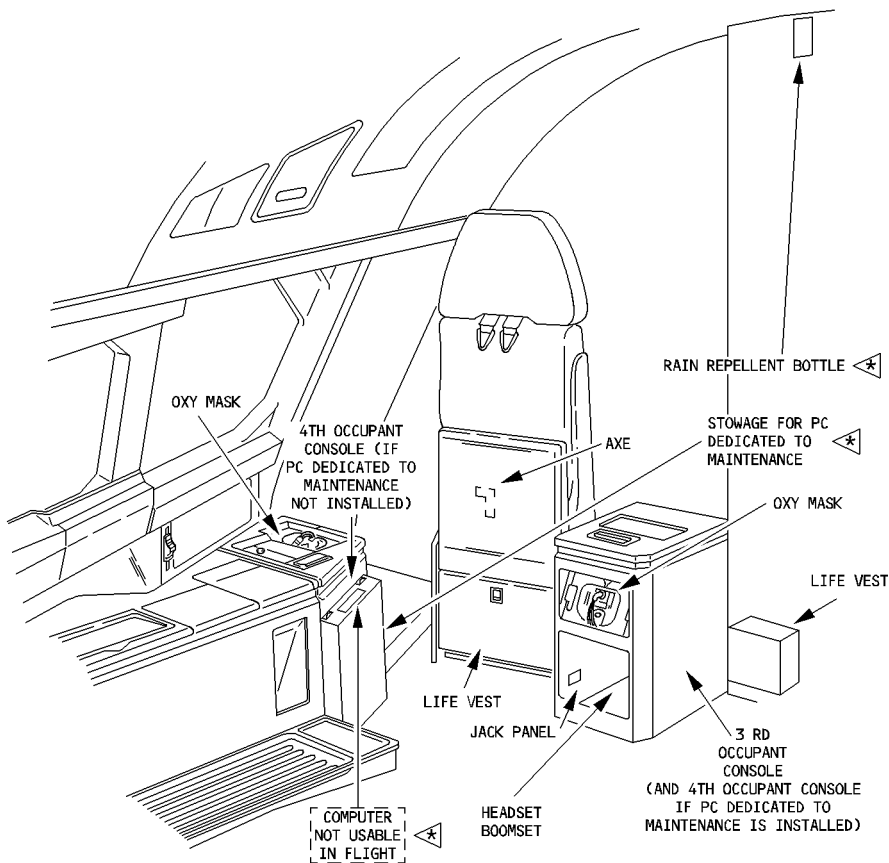

FC5-01-2510-004-A001AC

R LEFT REAR CORNER

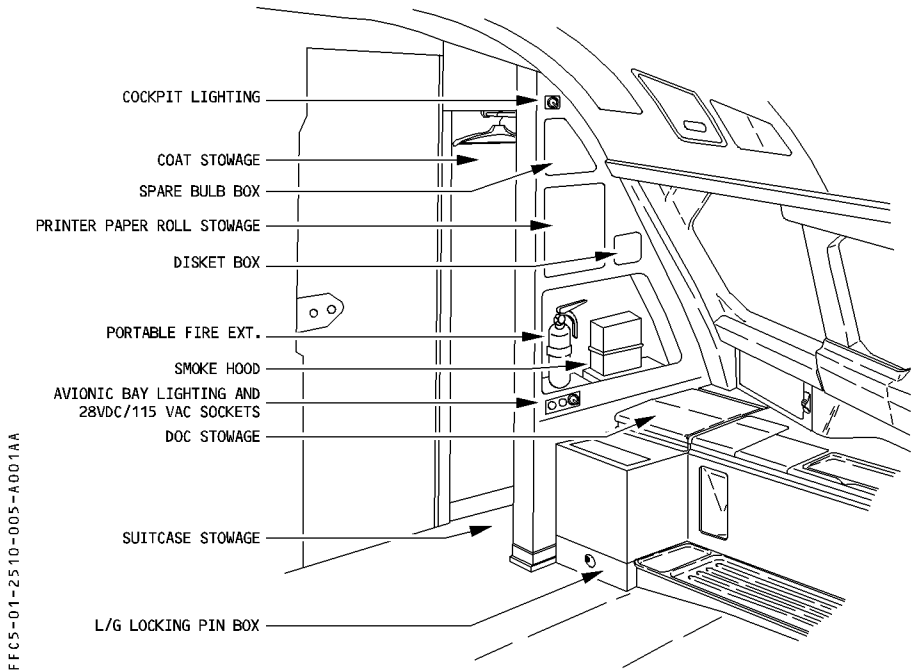




SEATS

R PILOT SEATS


They are column-mounted and electrically adjustable.

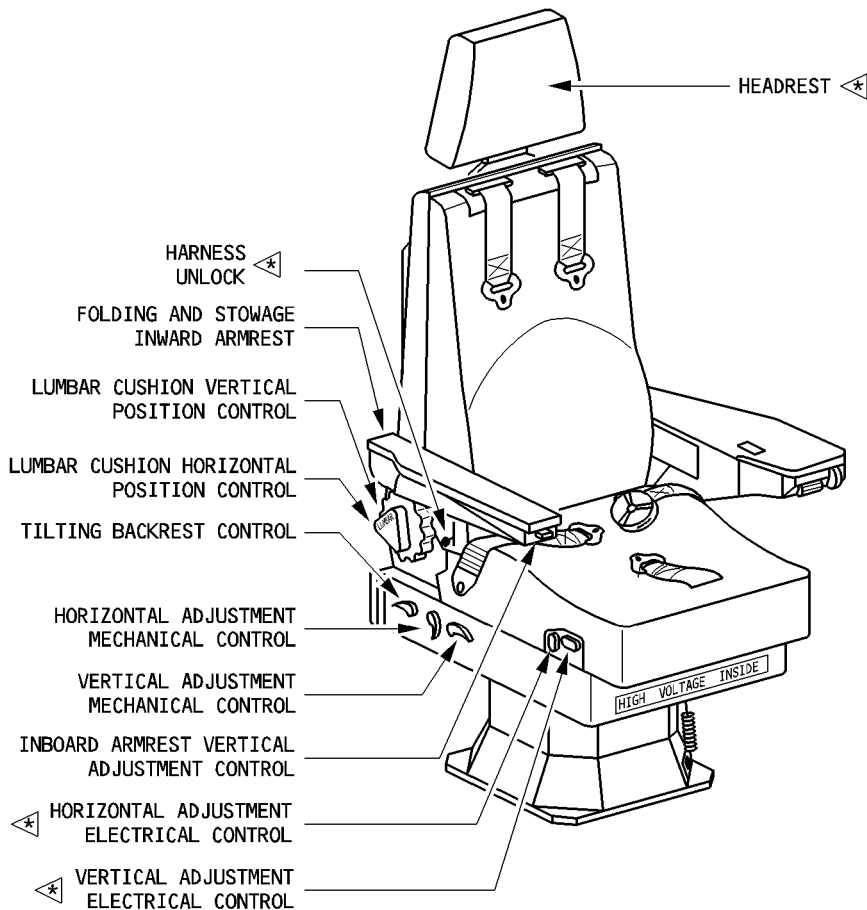

FFCS-01-2510-006-A001A

AIRBUS TRAINING  A340 SIMULATOR FLIGHT CREW OPERATING MANUAL	EQUIPMENT		1.25.10	P 6a
	FLIGHT DECK		SEQ 001	REV 19

THIRD OCCUPANT SEAT

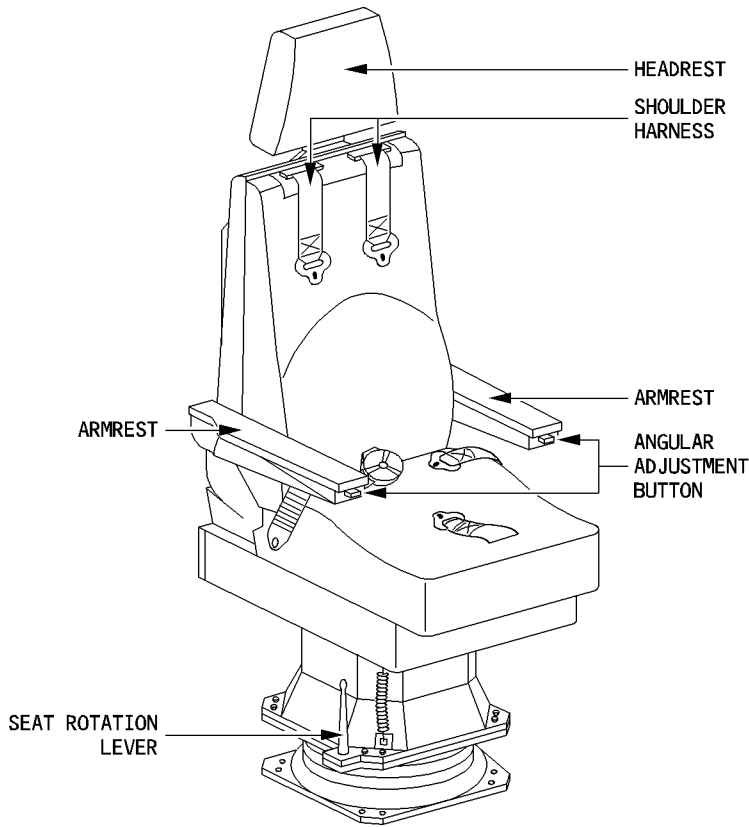

FFCS-01-2510-006A-A001AA

 A340 SIMULATOR FLIGHT CREW OPERATING MANUAL	EQUIPMENT		1.25.10	P 7
	FLIGHT DECK		SEQ 002	REV 19

PILOT AND THIRD OCCUPANT SEAT MECHANICAL ADJUSTMENT

- To adjust a seat mechanically, the occupant must lift the appropriate control handle. This unlocks the seat so that it may be moved. Releasing the control handle returns it to the
- R springloaded locked position. Pilot seat mechanical adjustment is a backup : The seat should be adjusted electrically.
- R When aligned with the aircraft's centerline, and in the maximum forward position, the third
- R occupant's seat can be rotated by using the rotation lever, located on the seat base.

R PILOT SEAT ELECTRICAL ADJUSTMENT

To adjust a seat electrically, the occupant must press the appropriate control switch in the desired direction, and release it when the seat reaches the desired position. The switch then returns to the springloaded neutral position.

To adjust the vertical position of the lumbar cushion, the occupant must :

- Pull the control out to the unlocked position,
- Turn the control to adjust the position of the cushion, and
- Push the control into the locked position.

HEADREST ADJUSTMENT

To adjust the headrest in inclination, the occupant must press the inclination control button, and release it to lock the position.



To control the height of the headrest, the occupant must push it horizontally, then adjust the height. Once released, it locks the position.

PILOT SEAT INBOARD ARMREST ADJUSTMENT

To adjust the inboard armrest, the occupant must turn the knurled knob, located on the bottom surface of the armrest.



PILOT SEAT OUTBOARD ARMREST ADJUSTMENT

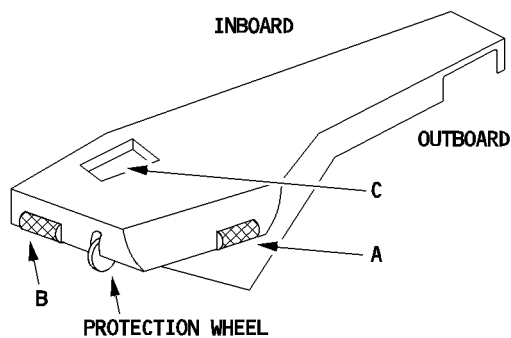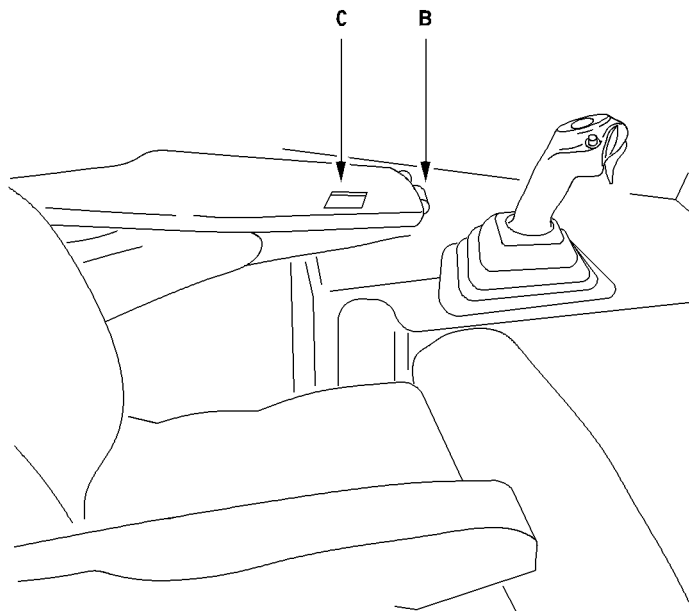

The position of the armrest is adjustable as follows :

A – Height adjustment

B – Pitch adjustment


The armrest also has a memory display (C) that shows pitch and height.

FFCS-01-2510-008-A002AA

AIRBUS TRAINING  A340 SIMULATOR FLIGHT CREW OPERATING MANUAL	EQUIPMENT		1.25.10	P 9
	FLIGHT DECK		SEQ 002	REV 08

FORTH OCCUPANT SEAT

It is a folding seat.

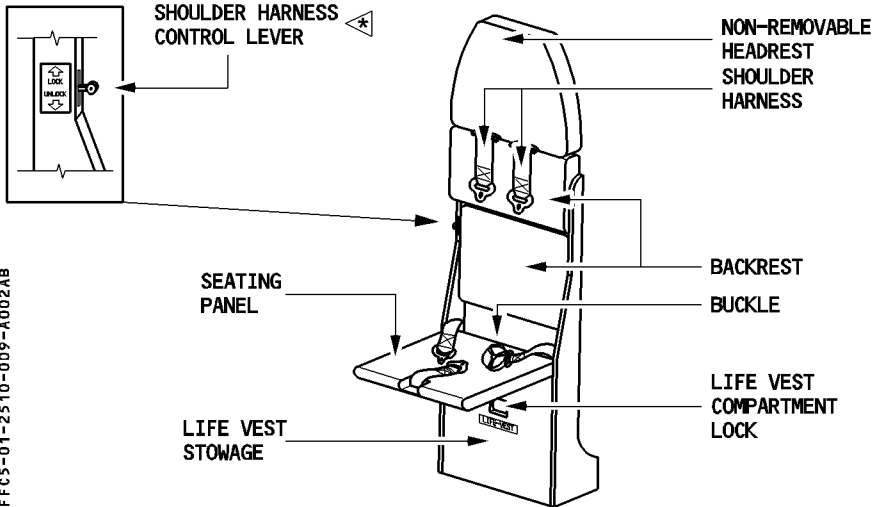



COCKPIT WINDOW

The cockpit has fixed and sliding windows.

FIXED WINDOWS

There are four fixed windows :

- two windshields
- two fixed side windows

SLIDING WINDOWS

The flight crew can use the sliding window as emergency exits. Therefore they are not permitted to stow any object so that it protrudes into the window area from the side console.


Each sliding window includes a panel which as an anti-icing and defogging system, and the opening and closing mechanism.

Opening mechanism

Fully press the operating lever to disengage the locking pins from their latches.
 Rotate aft the operating lever to free the window panel from its fixed structure.
 At the end of the operating lever travel, pull backwards to slide the window panel aft.
 Move control lever forward lock the window.


Closing mechanism

Move control lever aft unlock the window.
 Push operating lever forward until the panel is in position opposite its fixed frame.
 Rotate the operating lever forward to move the panel into its frame and engage the locking pins in their latches.

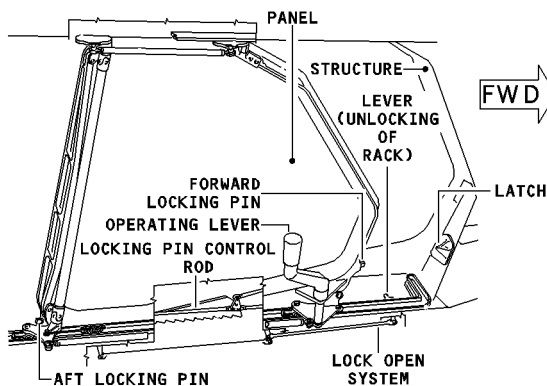


R

PILOT'S INSTRUMENT PANELS

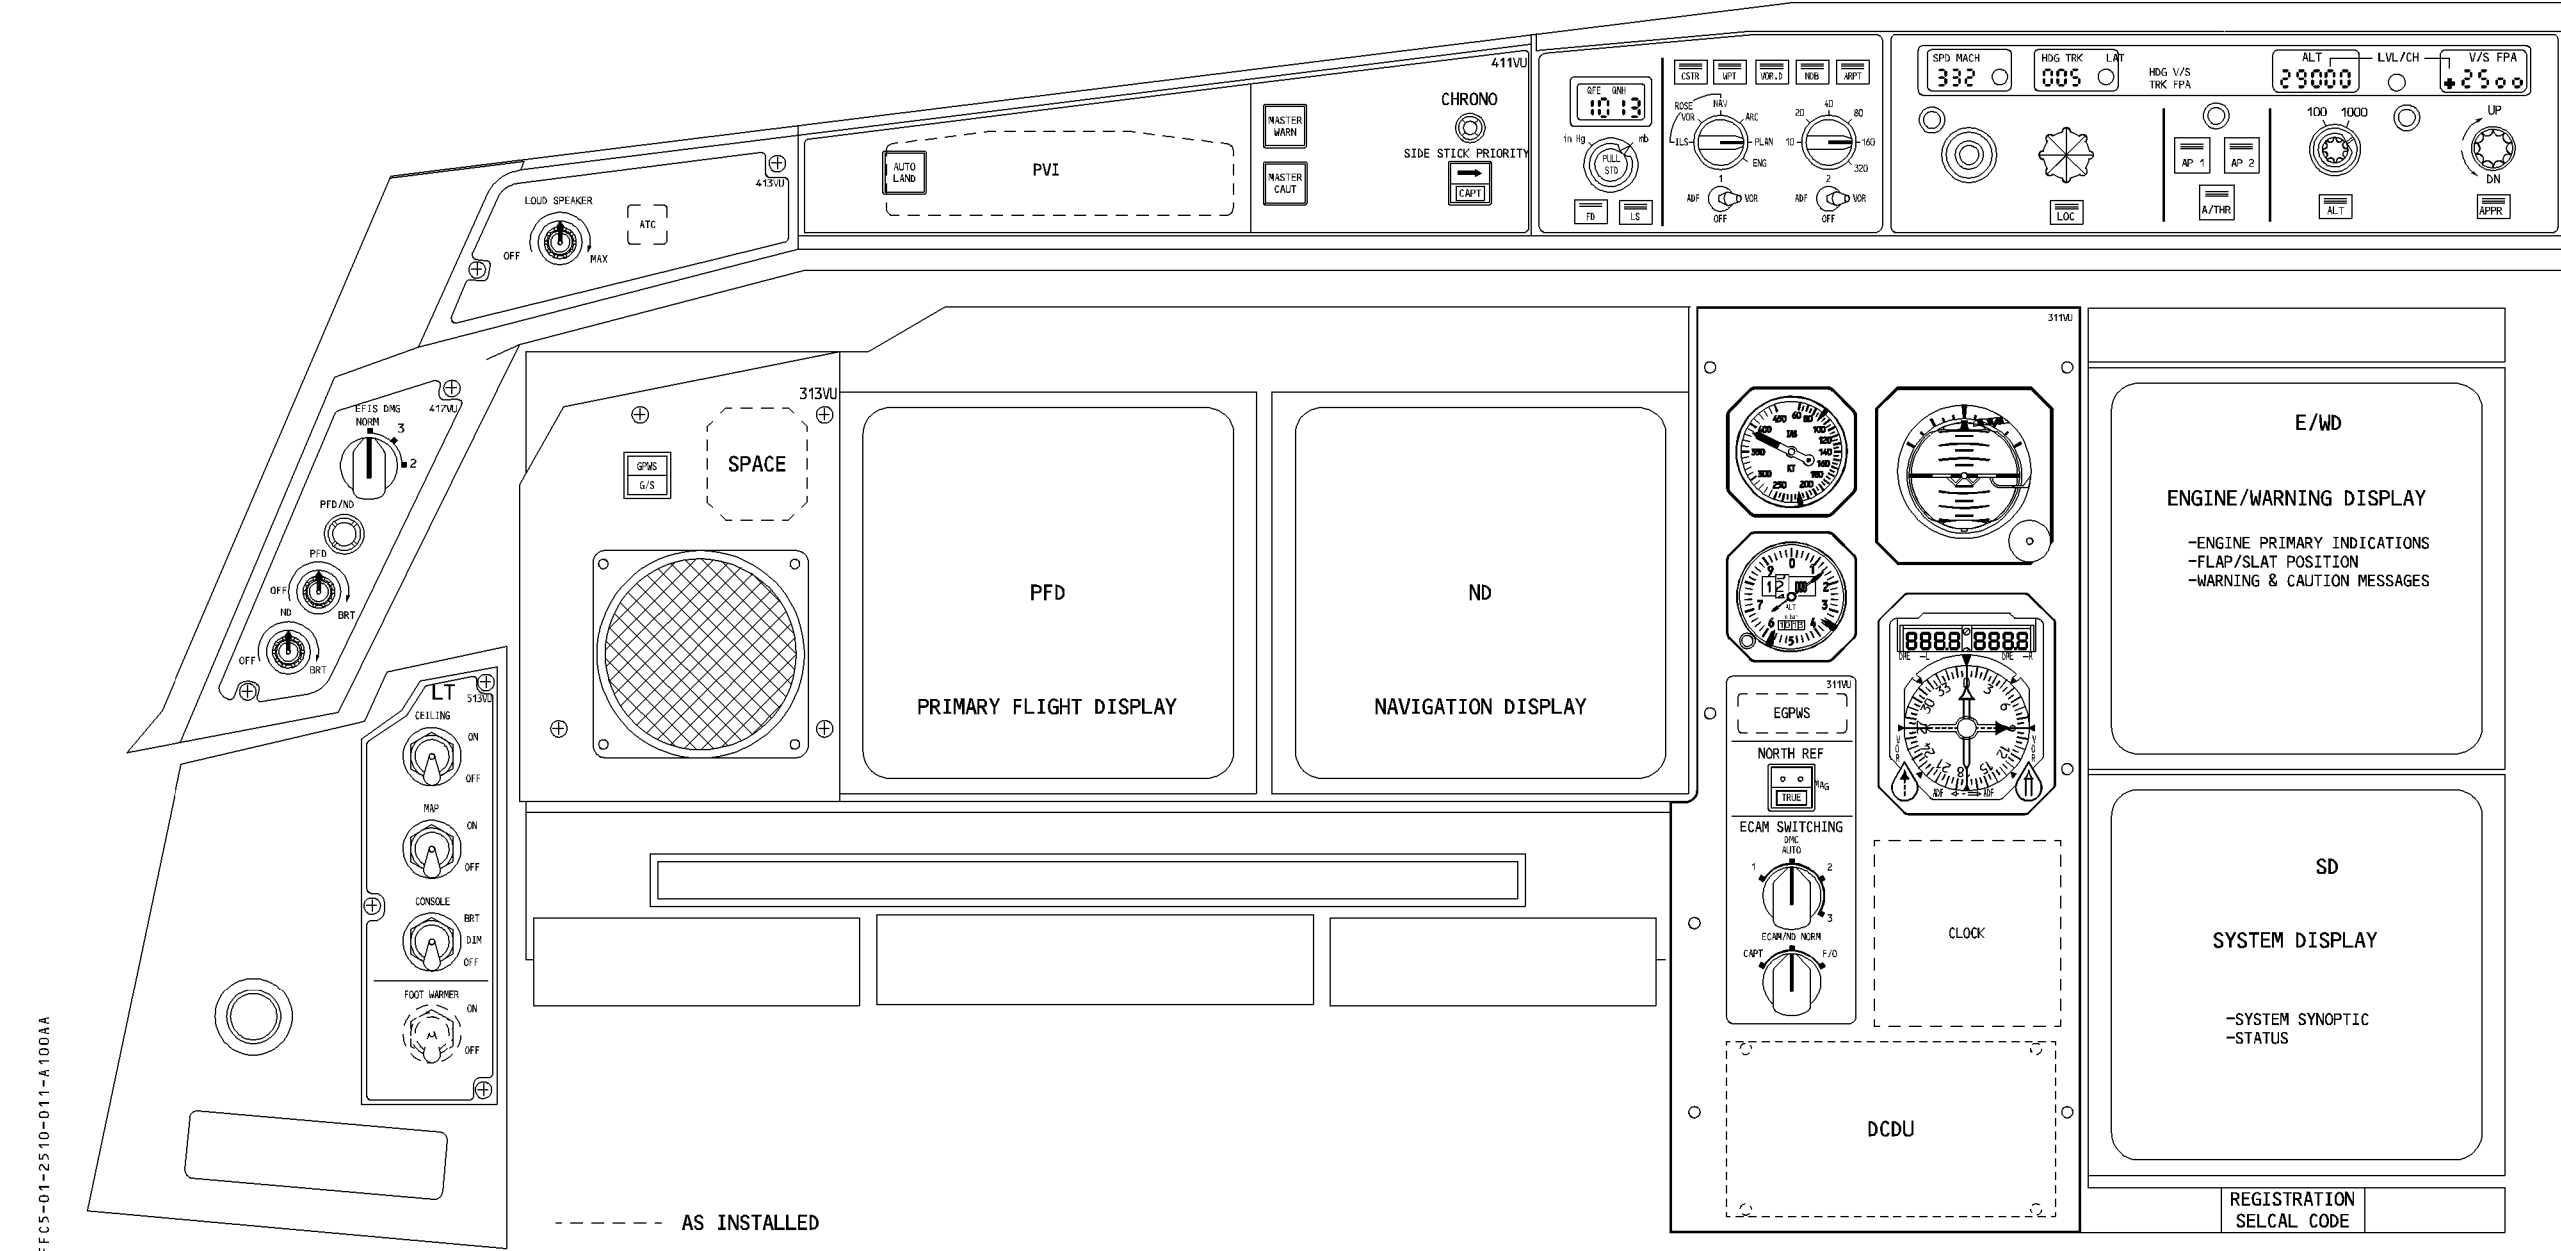


PILOT'S INSTRUMENT PANEL (cont'd)

R

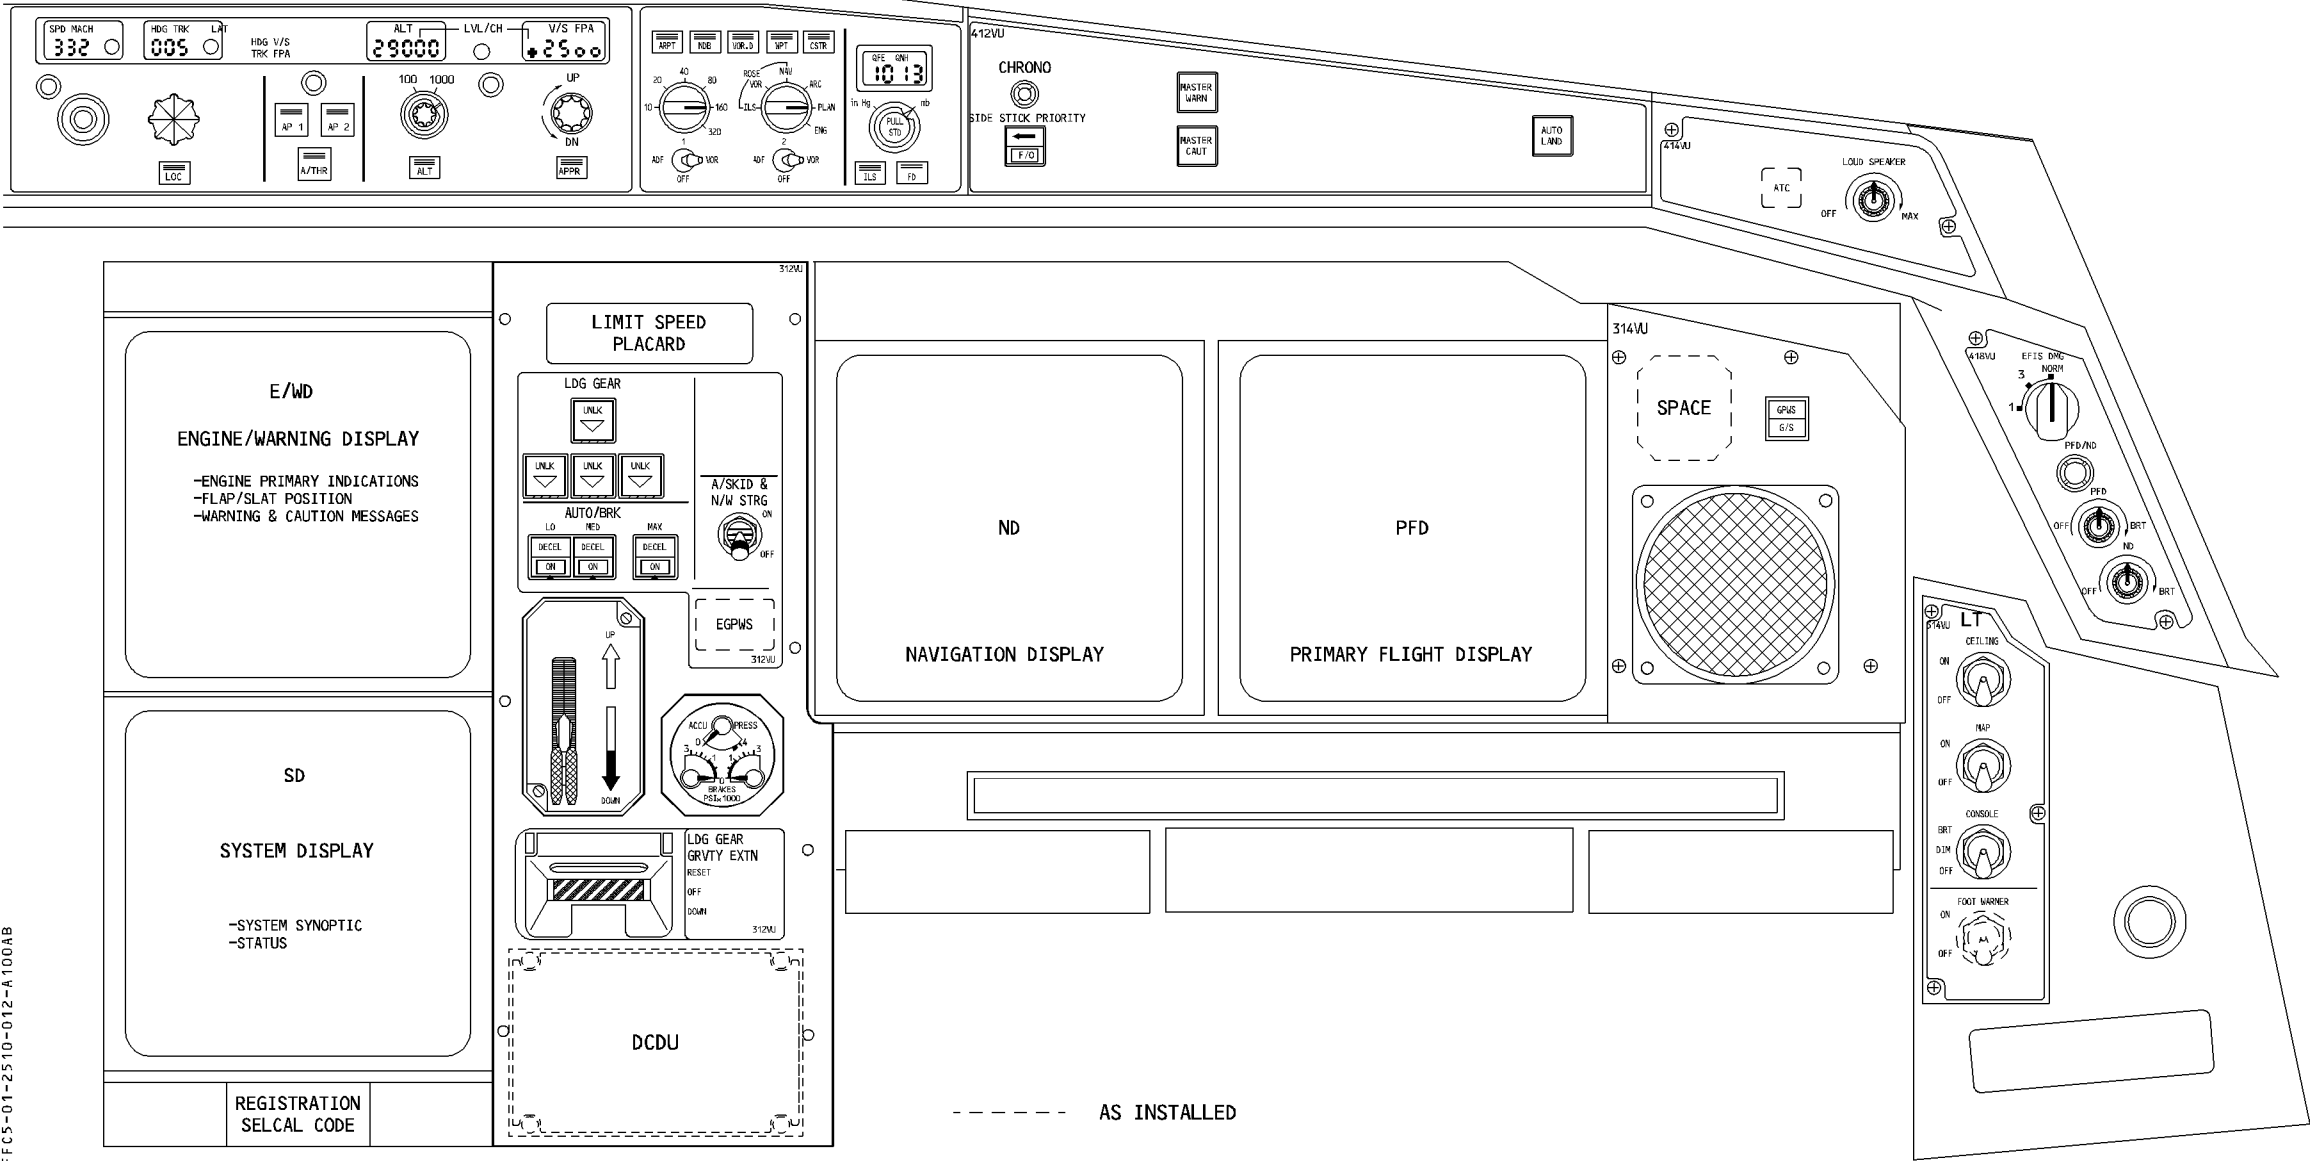


PEDESTAL

FFCS-01-2510-013-A 100AA

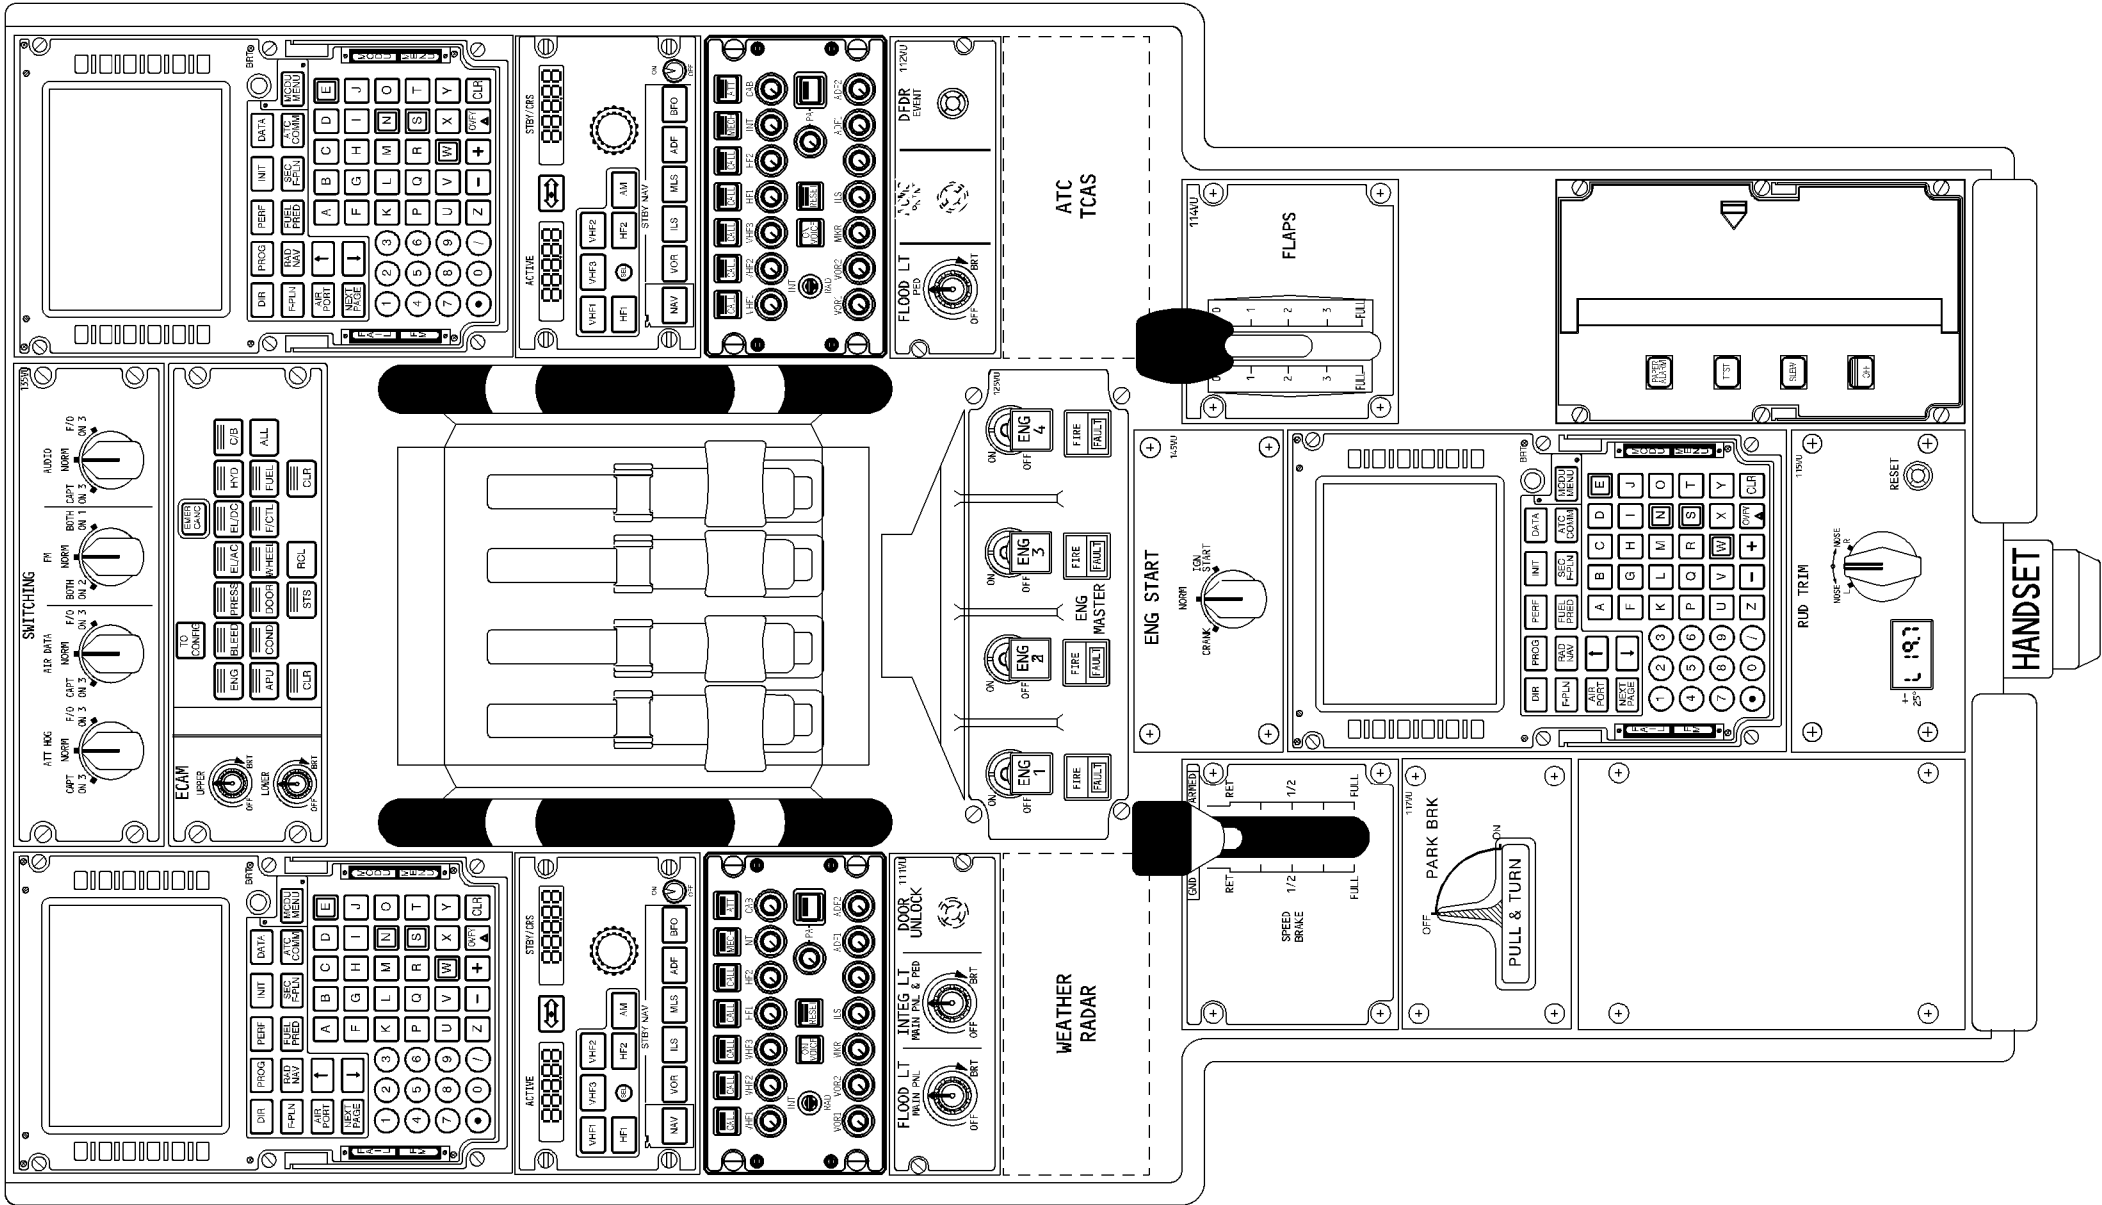

OVERHEAD PANEL

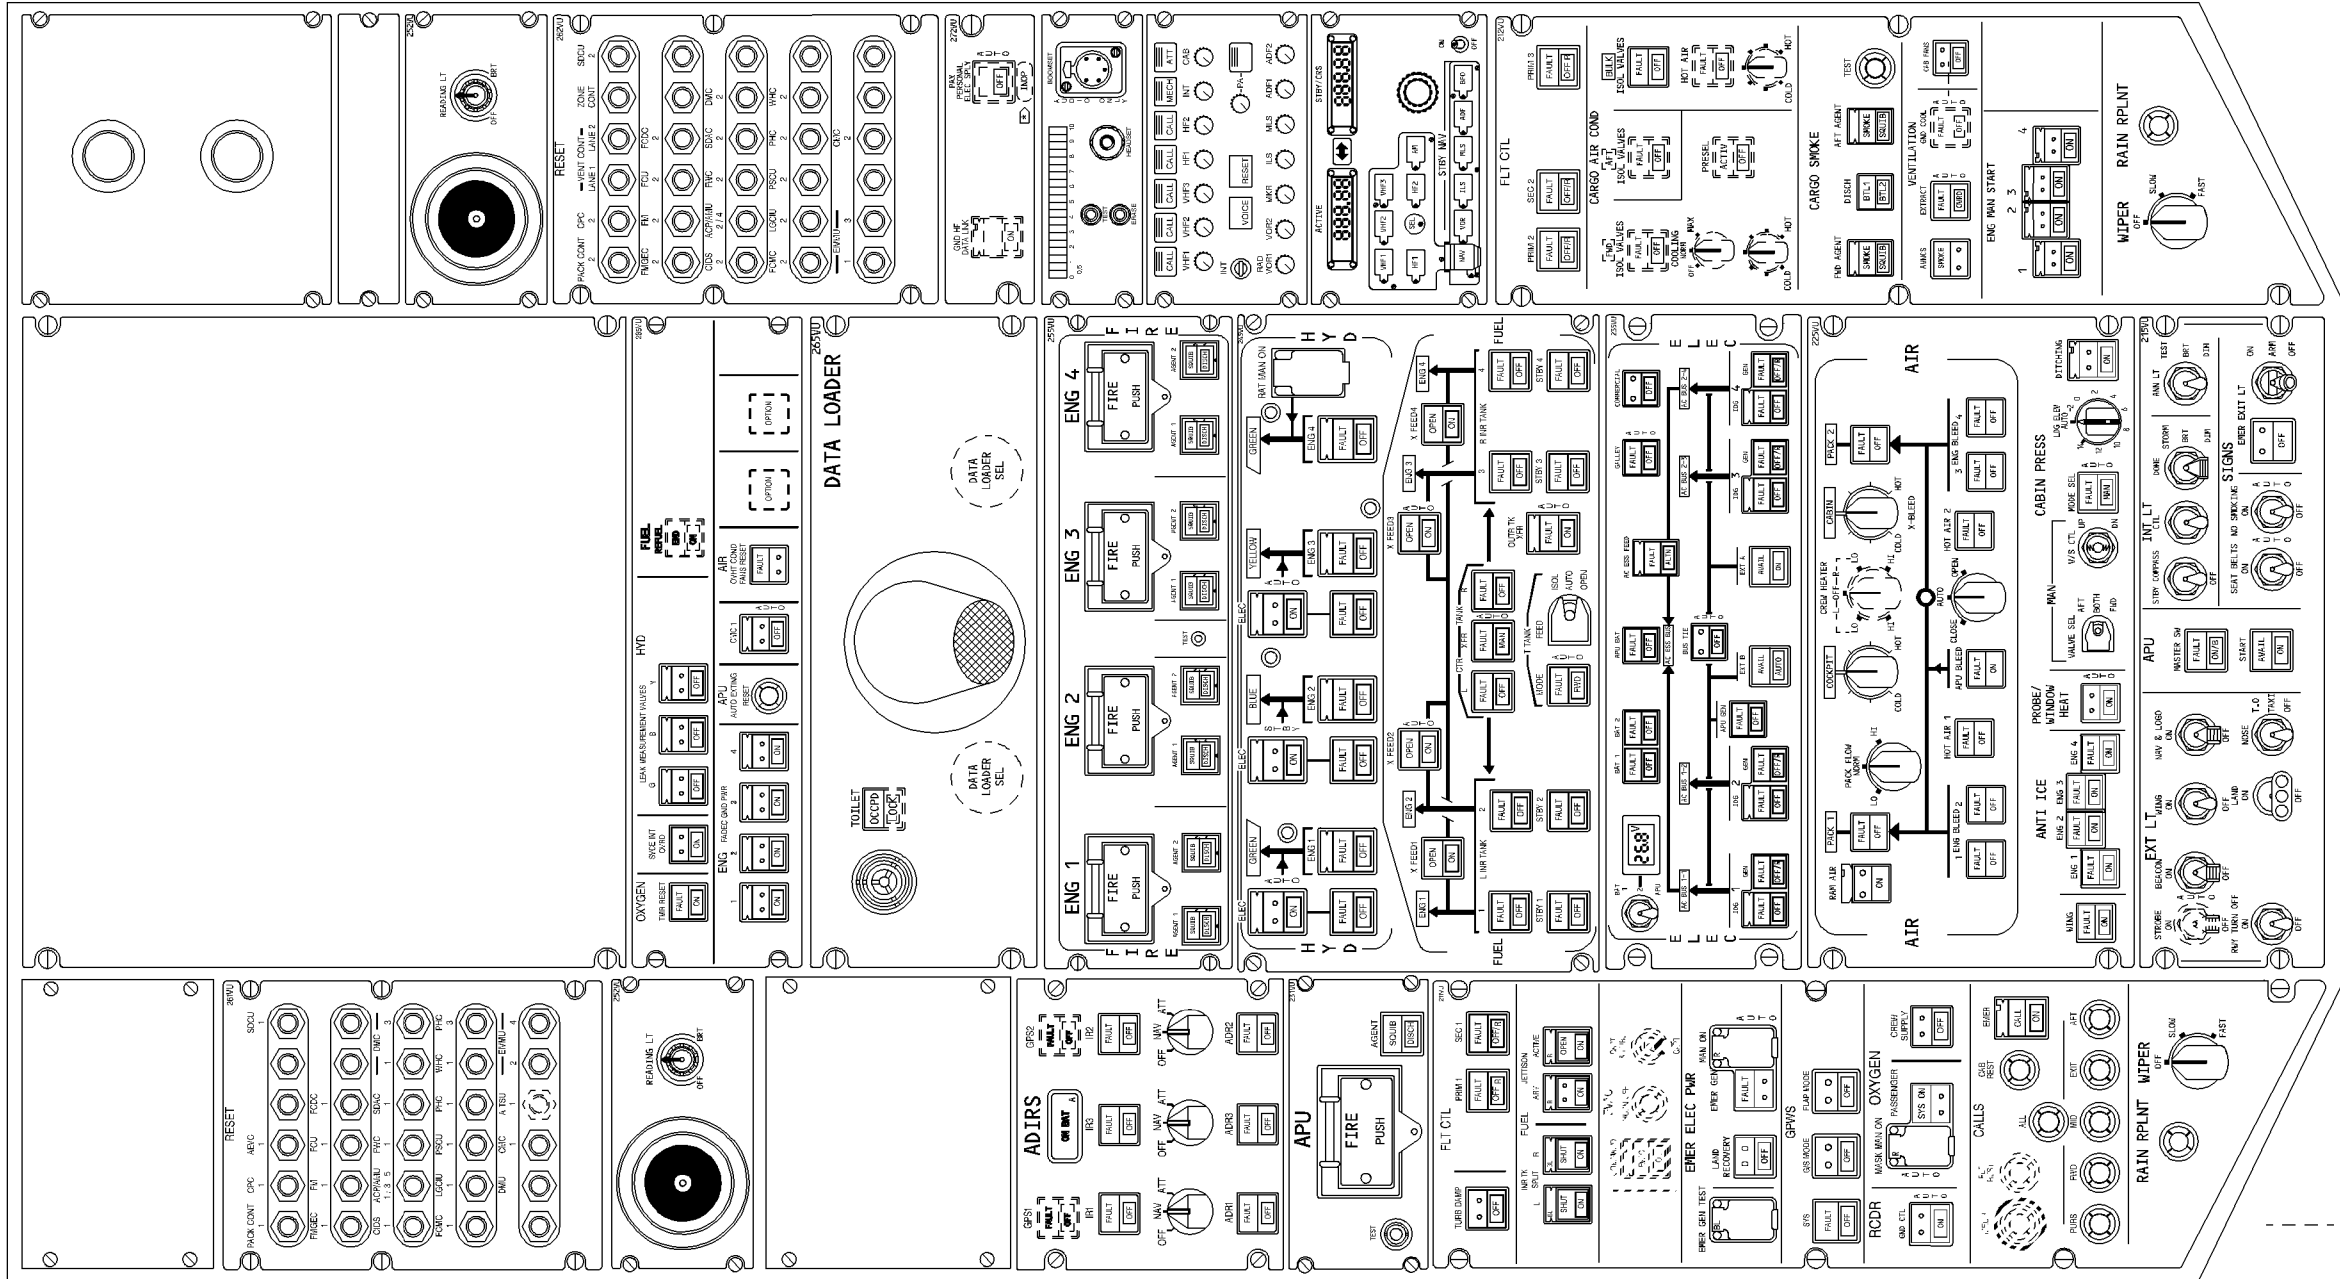

--- AS INSTALLED


<div><div><div>AIRBUS TRAINING</div><div>A340 SIMULATOR</div><div>FLIGHT CREW OPERATING MANUAL</div></div></div>	<div>EQUIPMENT</div> <div>FLIGHT DECK</div>	1.25.10	P 15
		SEQ 001	REV 08

FOOT WARMER

NOT APPLICABLE

CONTROLS

NOT APPLICABLE

<div><div><div>AIRBUS TRAINING</div><div>A340 SIMULATOR</div><div>FLIGHT CREW OPERATING MANUAL</div></div></div>	<div>EQUIPMENT</div> <div>IN SEAT POWER SUPPLY SYSTEM</div>	1.25.16	P 1
		SEQ 001	REV 14

GENERAL

NOT APPLICABLE

CONTROLS

NOT APPLICABLE

BUS EQUIPMENT LIST

R

	NORM			EMER ELEC		
	AC	DC	DC BAT	AC ESS	DC ESS	HOT
CAPTAIN SEAT	AC1-1					
F/O SEAT	AC2-4					
FOOT WARMER <Δ	AC1-1					
IN SEAT POWER SUPPLY <Δ	AC1-2					
COCKPIT DOOR LOCKING SYSTEM <Δ		DC2				
COCKPIT DOOR LOCKING SYSTEM BACKUP <Δ		DC1				
COCKPIT DOOR SURVEILLANCE SYSTEM <Δ		DC1				