KING AIR 200 ANNUNCIATOR PANELS

FIRE L ENG	ALT WARN	INST INV	FIRE R ENG
L FUEL PRESS	*AP TRIM FAIL	*AP DISC	R FUEL PRESS
L BL AIR FAIL	———	———	R BL AIR FAIL
L CHIP DET	———	———	R CHIP DET

* OPTIONAL EQUIPMENT BB-453 AND AFTER

FIRE L ENG	ALT WARN	FIRE R ENG
L FUEL PRESS	INST INV	R FUEL PRESS
L BL AIR FAIL	*AP TRIM FAIL	R BL AIR FAIL
L CHIP DETECT	———	R CHIP DETECT

PRIOR TO BB-453

WARNING ANNUNCIATOR PANEL—200 AIRCRAFT

L ENG FIRE	INVERTER	CABIN DOOR	ALT WARN	R ENG FIRE
L FUEL PRESS	———	———	———	R FUEL PRESS
*L OIL PRESS	*L GEN OVHT	*A/P TRIM FAIL	*R GEN OVHT	*R OIL PRESS
L CHIP DETECT	L BL AIR FAIL	*A/P DISC	R BL AIR FAIL	R CHIP DETECT

* OPTIONAL EQUIPMENT

WARNING ANNUNCIATOR PANEL—B200 AIRCRAFT
(PRIOR TO BB-1444, EXCEPT BB-1439)

L ENG FIRE	INVERTER	DOOR UNLOCKED	ALT WARN	R ENG FIRE
L FUEL PRESS	———	———	———	R FUEL PRESS
*L OIL PRESS	*L GEN OVHT	*A/P TRIM FAIL	*R GEN OVHT	*R OIL PRESS
———	L BL AIR FAIL	*A/P FAIL	R BL AIR FAIL	———

*OPTIONAL EQUIPMENT

WARNING ANNUNCIATOR PANEL—B200 AIRCRAFT
(BB-1439, 1444 AND SUBSEQUENT)

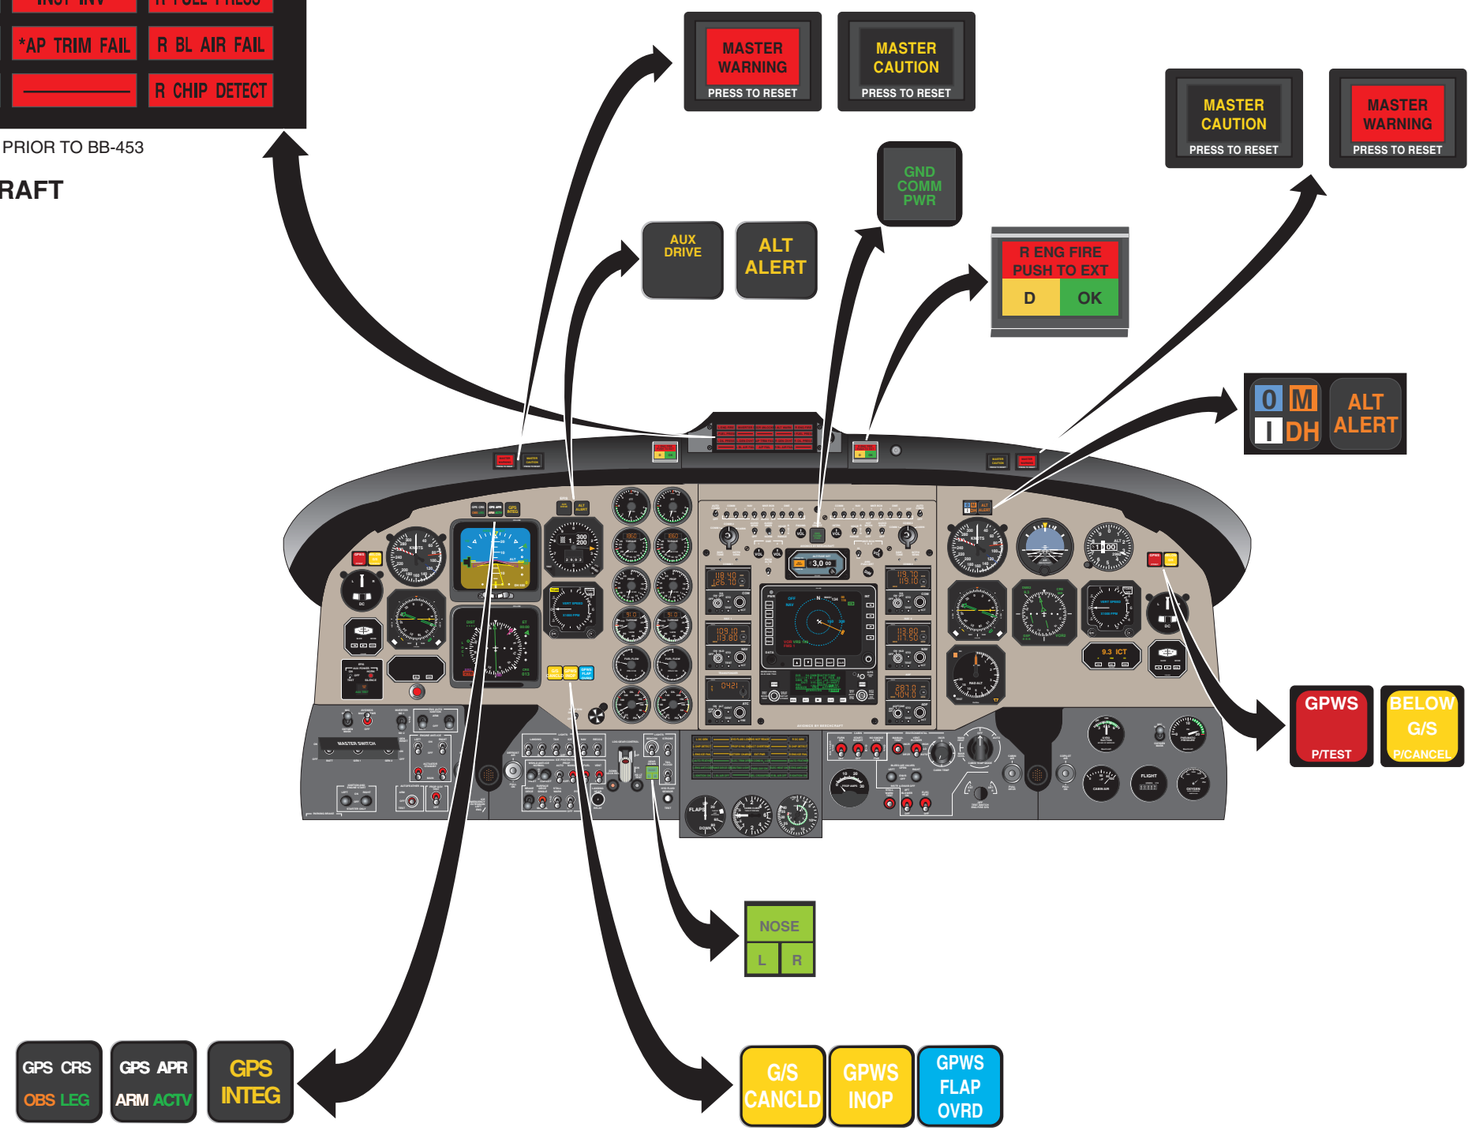

KING AIR 200 CAUTION-ADVISORY ANNUNCIATOR PANELS

L DC GEN	L ICE VANE	RVS NOT READY	R ICE VANE	R DC GEN
———	CABIN DOOR	PROP SYNC ON	EXT PWR	———
———	———	BATTERY CHG	DUCT OVERTEMP	———
L AUTOFEATHER	ELEC TRIM OFF	FUEL CROSSFEED	AIR COND N_1 LOW	R AUTOFEATHER
L ICE VANE EXT	BRAKE DEICE ON	LANDING LIGHT	PASS OXYGEN ON	R ICE VANE EXT
L IGNITION ON	L BL AIR OFF	CAUT LGND OFF	R BL AIR OFF	R IGNITION ON

(PRIOR TO BB-453)

L DC GEN	———	PROP SYNC ON	RVS NOT READY	———	R DC GEN
———	———	CABIN DOOR	DUCT OVERTEMP	———	———
L ICE VANE	———	BATTERY CHARGE	EXT PWR	———	R ICE VANE
L AUTOFEATHER	———	ELEC TRIM OFF	AIR COND N_1 LOW	———	R AUTOFEATHER
L ICE VANE EXT	BRAKE DEICE ON	LANDING LIGHT	PASS OXYGEN ON	———	R ICE VANE EXT
L IGNITION ON	L BL AIR OFF	CAUT LGND OFF	FUEL CROSSFEED	R BL AIR OFF	R IGNITION ON

(BB-453 AND AFTER)

*Optional Equipment

L DC GEN	———	HYD FLUID LOW	RVS NOT READY	———	R DC GEN
L CHIP DETECT	———	———	DUCT OVERTEMP	———	R CHIP DETECT
L ENG ICE FAIL	———	BATTERY CHARGE	EXT PWR	———	R ENG ICE FAIL
*L AUTOFEATHER	———	*ELEC TRIM OFF	AIR COND N_1 LOW	———	*R AUTOFEATHER
L ENG ANTI-ICE	*BRAKE DEICE ON	LDG/TAXI LIGHT	PASS OXY ON	ELEC HEAT ON	R ENG ANTI-ICE
L IGNITION ON	L BL AIR OFF	———	FUEL CROSSFEED	R BL AIR OFF	R IGNITION ON

(BB-1439, 1444 AND SUBSEQUENT)

L DC GEN	HYD FLUID LOW	PROP SYNC ON	RVS NOT READY	———	R DC GEN
———	———	———	DUCT OVERTEMP	———	———
L ICE VANE	———	BATTERY CHARGE	EXT PWR	———	R ICE VANE
L AUTOFEATHER	———	ELEC TRIM OFF	AIR COND N_1 LOW	———	R AUTOFEATHER
L ICE VANE EXT	BRAKE DEICE ON	LDG/TAXI LIGHT	PASS OXYGEN ON	———	R ICE VANE EXT
L IGNITION ON	L BL AIR OFF	———	FUEL CROSSFEED	R BL AIR OFF	R IGNITION ON

(PRIOR TO BB-144, EXCEPT 1439)